

DD Series Centrifugal Blower

DD12-12 750W-6P

Ningbo Longwell Electric Technology CO.,LTD

NO.100, Ditang District ,Yuyao,Zhejiang Province,China 315400


Phone 86 574 6218 9863

Fax 86 574 6218 9863

sales@zjlongwell.com

www.longwellfans.com

Model No.:	DD12-12 750W-6P
Version Number:	A0
Make :	Wu
Review :	Baggins
Approvd :	Peter
Date:	20250515

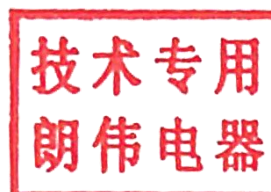

Version number	Notes Remarks	Reason content	Revised by	Date

DD Series Centrifugal Blower

DD12-12 750W-6P

Nominal Data

Project1	Unit	Rating
Nominal Voltage :	[VAC]	220
Frequency :	[Hz]	60
Speed :	[rpm]	900
Current (Max) :	[A]	7
Power input :	[W]	750
flow (Max) :	[m3/h]	6206
	[CFM]	3650
Static pressure (Max) :	[Pa]	336
Noise level (LpA) :	dB(A)	58~67
Max.ambient Temp :	℃	50
Min.ambient Temp :	℃	-25
Insulation Class :		Class F
Protection Type :		IP20
Work system :		S1

DD Series Centrifugal Blower

DD12-12 750W-6P

Technical Features

Service environment	Operating temperature: -25~50℃; Operating humidity: 0 ~ 50 % RH Storing temperature: -25 ~ 80℃; Storing humidity: ≤60 % RH Applicable altitude range: < 1000m
Life Expectance	40,000Hours(L10), At 40℃ room, humidity 15%~50%RH.
Balancing	At rated voltage and frequency, the impeller dynamic balance precision is no more than G5.6, according with JB/T9070-2017.
Vibration of the fan	Test method accord with JB/T 8689
Runout of impeller	Runout of impeller in axial and radial direction ≤1.0
Material	Volute assembly and impeller assembly are galvanized sheet
Bearing	TPI maintenance-free ball bearings


Technical Features

Production Reference standard	GB12350 《Safety requirements of small power motors》 GB/T13275 « General technical requirment for general centrifugal fan » EN60335-1 《Household and similar electrical appliances-safety》 ISO5801-1997 《Industrial fans-performance testing using standardized airways》 GB/T2888 《Methods of Noise Measurement for Fans Blowers Compressors and Roots Blowers》
Certification	CE
Environmental protection	RoHS、Reach

DD Series Centrifugal Blower

DD12-12 750W-6P

Product Drawing

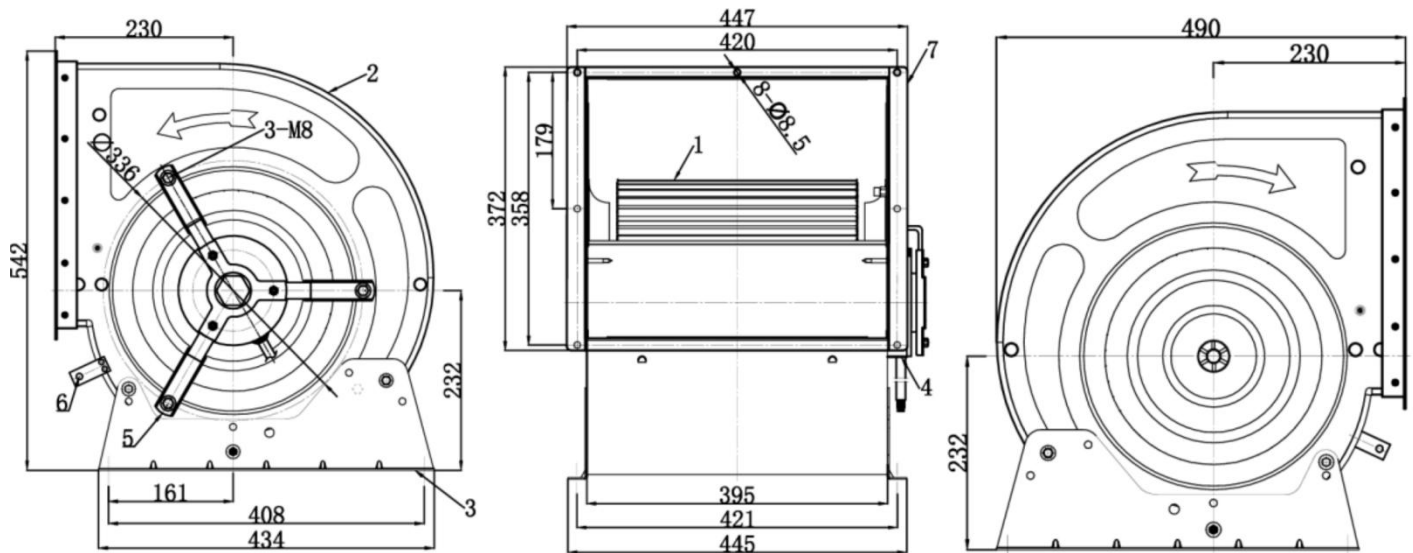


NO.	Part	material	treatment
1	volute(tongue)	Galvanized Steel	
2	flange	Galvanized Steel	
3	support plate	Galvanized Steel	
4	blade	Galvanized Steel	
5	middle plate	Galvanized Steel	
6	sleeve	A3/20#	Galvanized

DD Series Centrifugal Blower

DD12-12 750W-6P

Wiring Diagram

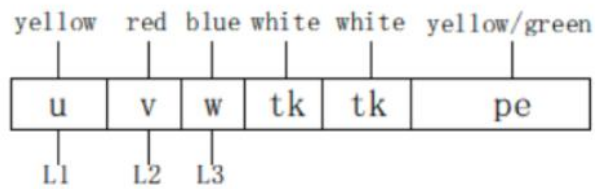


Label

Confirm by sales team when placing sample order or bulk order

DD Series Centrifugal Blower

DD12-12 750W-6P

Charts :Air Flow (P-Q)

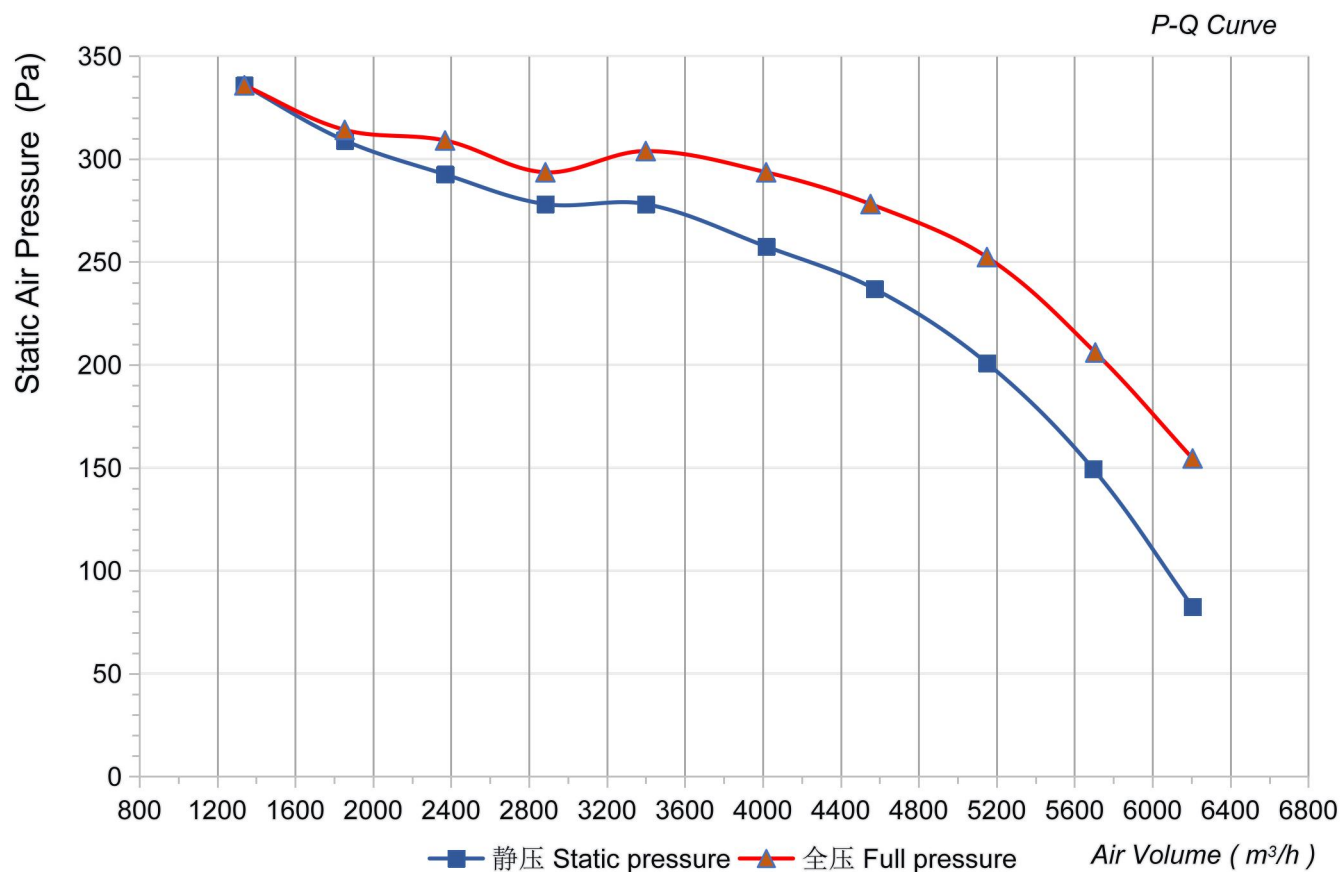

DD Series Centrifugal Blower

DD12-12 750W-6P

Warning:

1. The fan and motor must be used within the prescribed scope of temperature and humidity otherwise it will cause an unexpected damage.
2. Fan is not set wrong connection protection, Provide the right voltage and line sequence according to the nameplate otherwise it will damage the product.
3. Wiring depends on the wiring diagram and please connect the earth ground if required. We don't suggest to use the extension cord .Any wrong connection may cause the damage of the fan.
4. Be careful when moving the fan and do not take the blades as a handle because it will cause the distortion and chatter.
5. Connect the thermostat if required otherwise it would damage the motor because of the over temperature.
6. The length of the mounting screws shall not exceed the requirement, otherwise the fan will be damaged.
7. Do not disassemble the fan arbitrarily. It may hurt the capacity of water tightness and dynamic balance or cause other serious problems.
8. The over current protector is necessary in case the damage from the over current.
9. Install the fan as required, any other installing direction would affect the service life of the product.
10. The fan with inlet ring should be installed follow the requirements or it will affect the performance.
11. Users should use the standard cable when install the fan otherwise it will affect the water tightness.
12. The fan should keep away from the children especially the blade and electric parts .And the children are not allowed to operate the fan alone.
13. Do not connect the white signal cable directly to the red signal cable or the external DC power supply. Otherwise, the fan may be damaged.
14. Please do not perform extraction and insertion of the connector under revolution irrespective of power on and power on and power off , and the fan should not touch or move when running.
15. Do not lift the fan wire when taking the fan, and do not impact the bearing during the handling process.
16. The version change may not be notified, please ask our company for the latest version when necessary.
17. Please be informed that we are not responsible for any damage or accidents caused by violating above rules to install and operate the fan.

DD Series Centrifugal Blower

DD12-12 750W-6P

Approval

CUSTOMER APPROVAL**CUSTOMER SIGNATURE:****DATE :****Product Data Confirm :**