

DC Backward Centrifugal Fan

LWBD3G110-059NM-01-00

Ningbo Longwell Electric Technology CO.,LTD

NO.100, Ditang District ,Yuyao,Zhejiang Province,China 315400

Phone 86 574 6218 9863

Fax 86 574 6218 9863

sales@zjlongwell.com

www.longwellfans.com

Model No.:	LWBD3G110-059NM-01-00
Version Number:	A0
Make :	Zhong
Review :	Guo
Approvd :	Zhang
Date:	20260414

技术专用
朗伟电器

Version number	Notes Remarks	Reason content	Revised by	Date

DC Backward Centrifugal Fan

LWBD3G110-059NM-01-00

Nominal Data

Project1	Unit	Rating
Nominal Voltage :	[VDC]	24
Voltage Range :	[VDC]	16~28
Speed :	[rpm]	3200
Current :	[A]	0.15±10%
Power input :	[W]	3.6
Air flow (Max) :	[m3/h]	99
	[CFM]	58
Static pressure (Max) :	[mm-H2O]	130
Noise level (LpA) :	dB(A)	25
Max.ambient Temp :	℃	70
Min.ambient Temp :	℃	-10
Insulation Class :		Class B
Protection Type :		IP65
Work system :		S1

Technical Features

Production Reference standard	GB12350 《Safety requirements of small power motors》 JB/T10563 《technical specification for general purposes centrifugal fans》 EN60335-1 《Household and similar electrical appliances-safety》 ISO5801-1997 《Industrial fans-performance testing using standardized airways》 GB/T2888 《Methods of Noise Measurement for Fans Blowers Compressors and Roots Blowers》
Certification	CE ETL (UL 507:2017 Ed.10+R:27May2020, CSA C22.2#113:2018 Ed.11)
Environmental protection	RoHS、Reach

DC Backward Centrifugal Fan

LWBD3G110-059NM-01-00


Technical Features

Service environment	Operating temperature: -10~70℃; Operating humidity: 5 ~ 90 % RH Storing temperature: -20 ~ 85℃; Storing humidity: ≤95 % RH Applicable altitude range: < 1000m
Life Expectance	40,000Hours(L10), At 25℃ room, humidity 15%~65%RH.
Balancing	According to JB/T 9101-1999 requirements G6.3
Vibration of the fan	Test method accord with JB/T 8689
Installation method	Horizontal or vertical installation
Material	PBT (Impeller)
Bearing	Maintenance-free deep groove ball bearings
Weight	198g

DC Backward Centrifugal Fan

LWBD3G110-059NM-01-00

Product Drawing

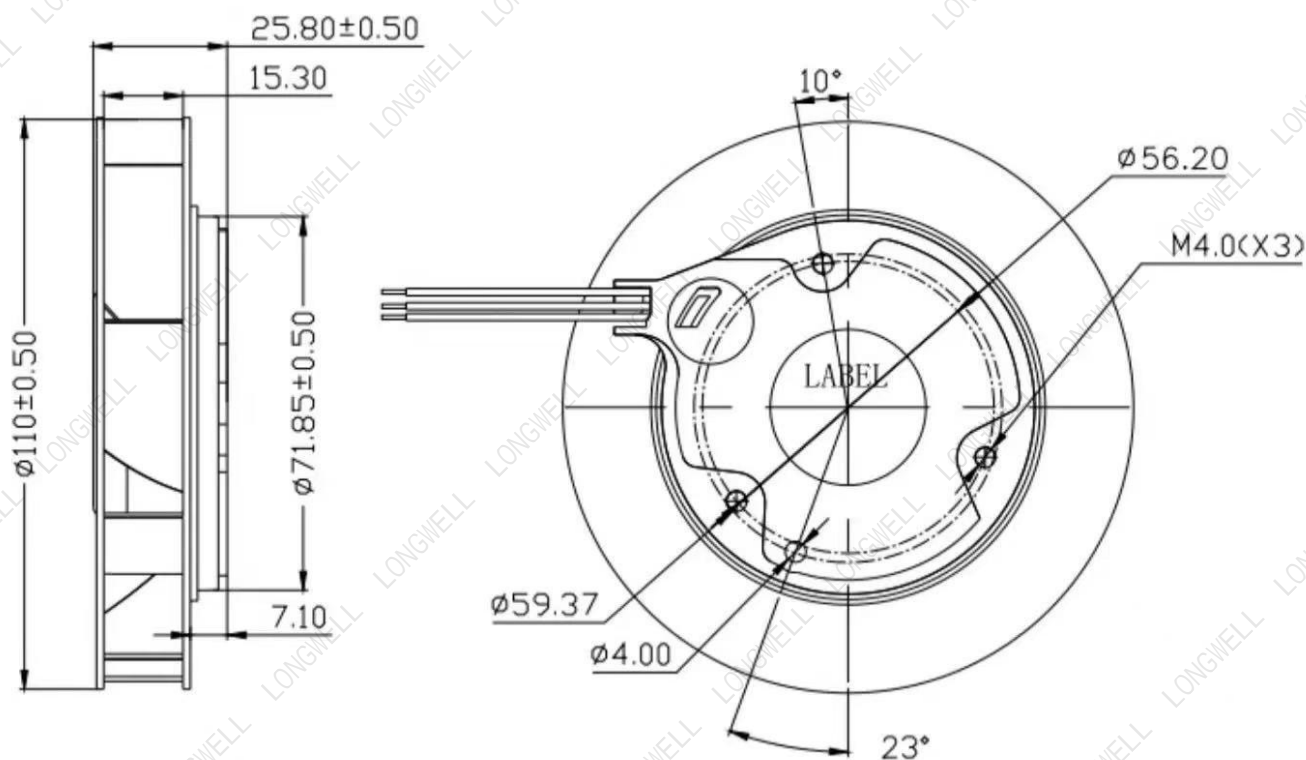

DC Backward Centrifugal Fan**LWBD3G110-059NM-01-00****Wiring Diagram**

L	Color	Function	Functional description
L1	Red	+24VDC	DC12V
	Black	GND	Ground reference end of control signal
	Blue	Speed Control	Speed regulation signal input terminal,PWM
	Yellow	FG	Speed feedback pulse output


Label

Confirm by sales team when placing sample order or bulk order

DC Backward Centrifugal Fan

LWBD3G110-059NM-01-00

Charts :Air Flow (P-Q)

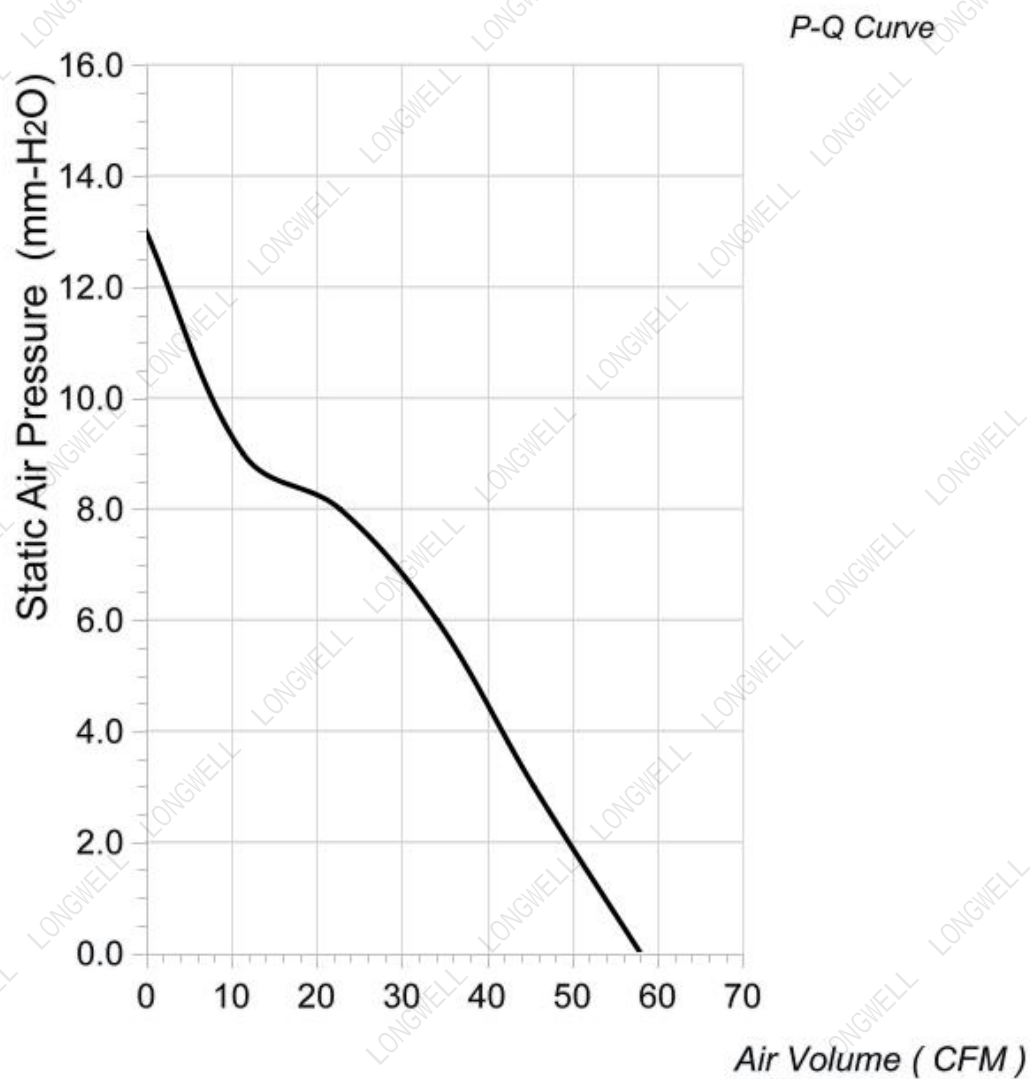

DC Backward Centrifugal Fan

LWBD3G110-059NM-01-00

Warning:

1. The fan and motor must be used within the prescribed scope of temperature and humidity otherwise it will cause an unexpected damage.
2. Fan is not set wrong connection protection, Provide the right voltage and line sequence according to the nameplate otherwise it will damage the product.
3. Wiring depends on the wiring diagram and please connect the earth ground if required. We don't suggest to use the extension cord .Any wrong connection may cause the damage of the fan.
4. Be careful when moving the fan and do not take the blades as a handle because it will cause the distortion and chatter.
5. Connect the thermostat if required otherwise it would damage the motor because of the over temperature.
6. The length of the mounting screws shall not exceed the requirement, otherwise the fan will be damaged.
7. Do not disassemble the fan arbitrarily. It may hurt the capacity of water tightness and dynamic balance or cause other serious problems.
8. The over current protector is necessary in case the damage from the over current.
9. Install the fan as required, any other installing direction would affect the service life of the product.
10. The fan with inlet ring should be installed follow the requirements or it will affect the performance.
11. Users should use the standard cable when install the fan otherwise it will affect the water tightness.
12. The fan should keep away from the children especially the blade and electric parts .And the children are not allowed to operate the fan alone.
13. Do not connect the white signal cable directly to the red signal cable or the external DC power supply. Otherwise, the fan may be damaged.
14. Please do not perform extraction and insertion of the connector under revolution irrespective of power on and power on and power off , and the fan should not touch or move when running.
15. Do not lift the fan wire when taking the fan, and do not impact the bearing during the handling process.
16. The version change may not be notified, please ask our company for the latest version when necessary.
17. Please be informed that we are not responsible for any damage or accidents caused by violating above rules to install and operate the fan.

DC Backward Centrifugal Fan

LWBD3G110-059NM-01-00

Approval

CUSTOMER APPROVAL**CUSTOMER SIGNATURE:****DATE :****Product Data Confirm :****Speed Control System :**

PWM

Note :Please check and mark the data when you sign the specification sheet .